

FIG. 2

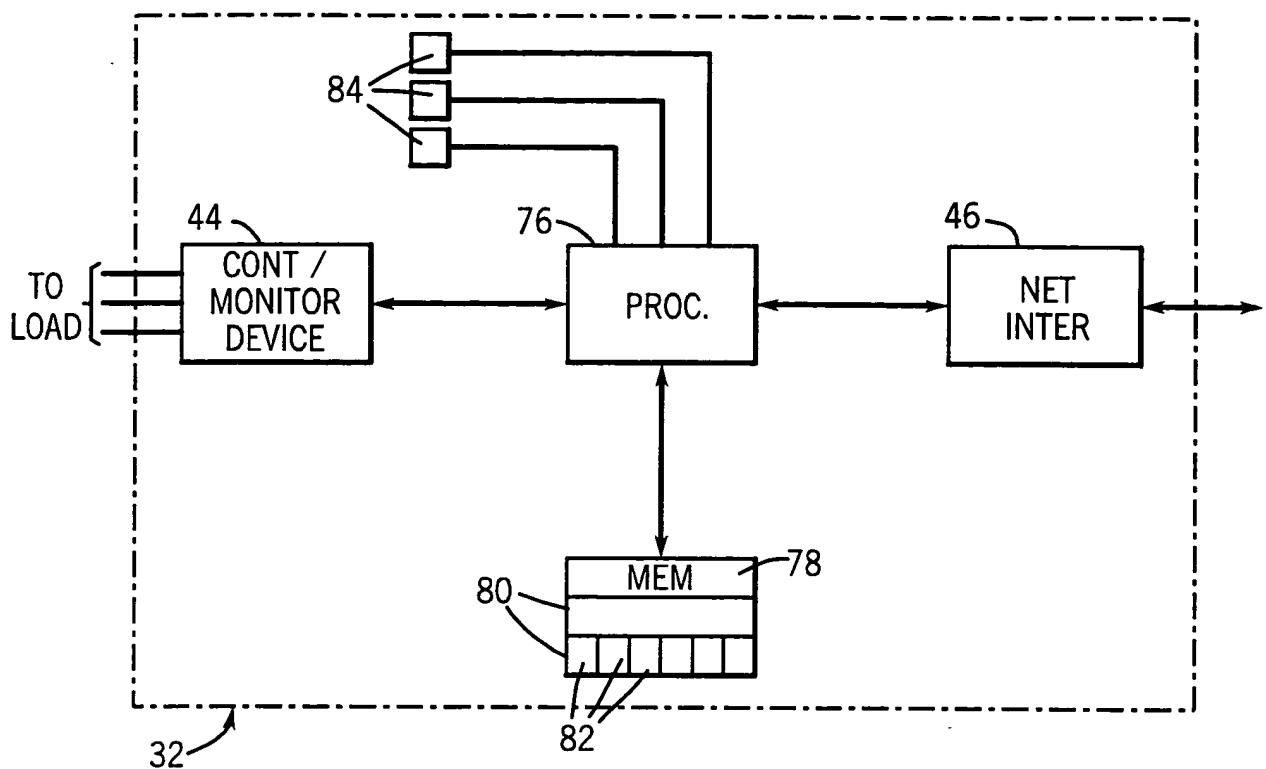
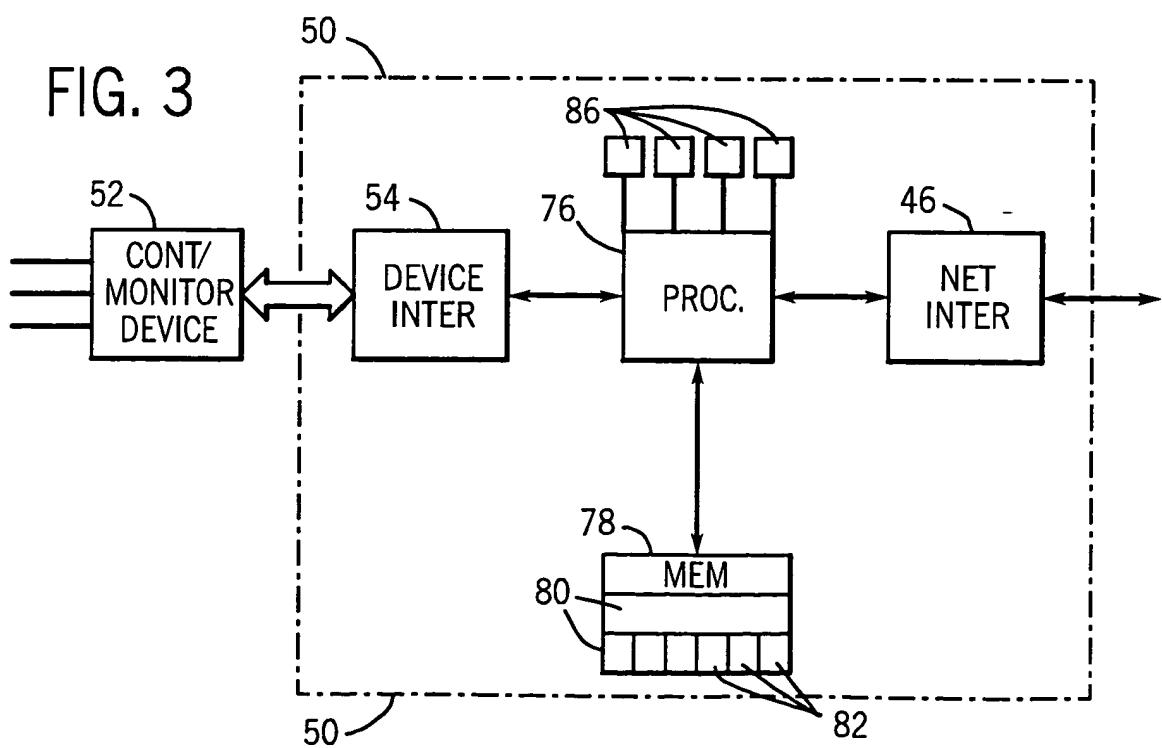


FIG. 3



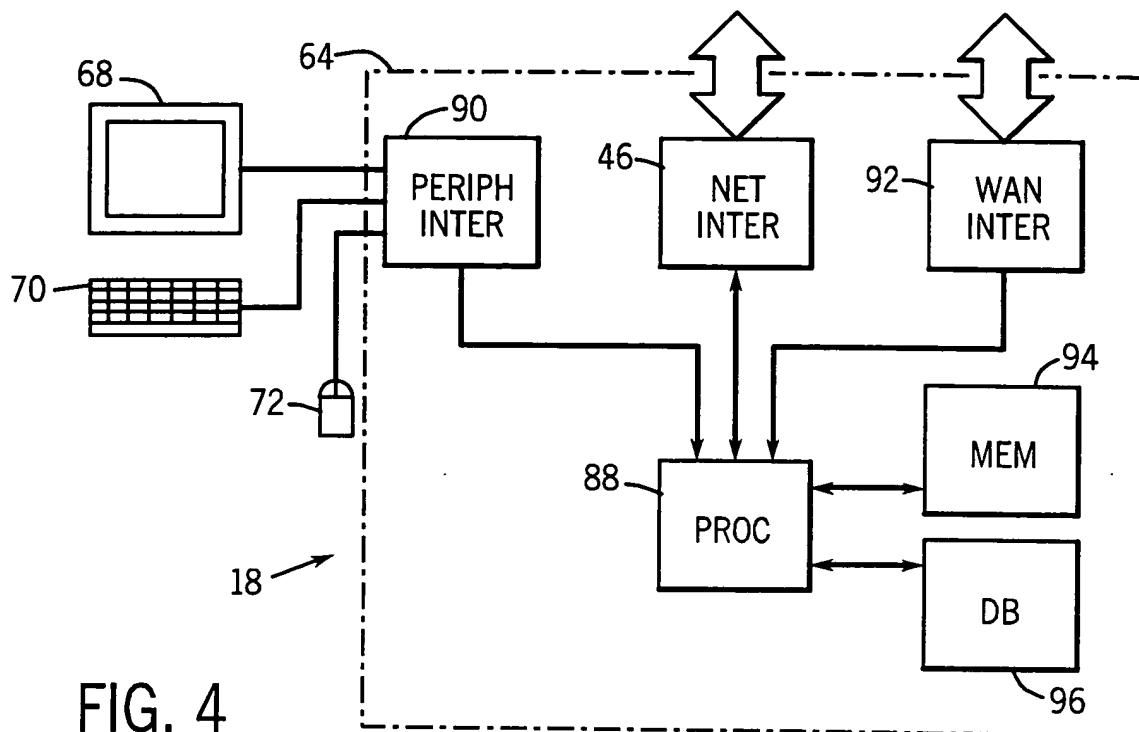


FIG. 4

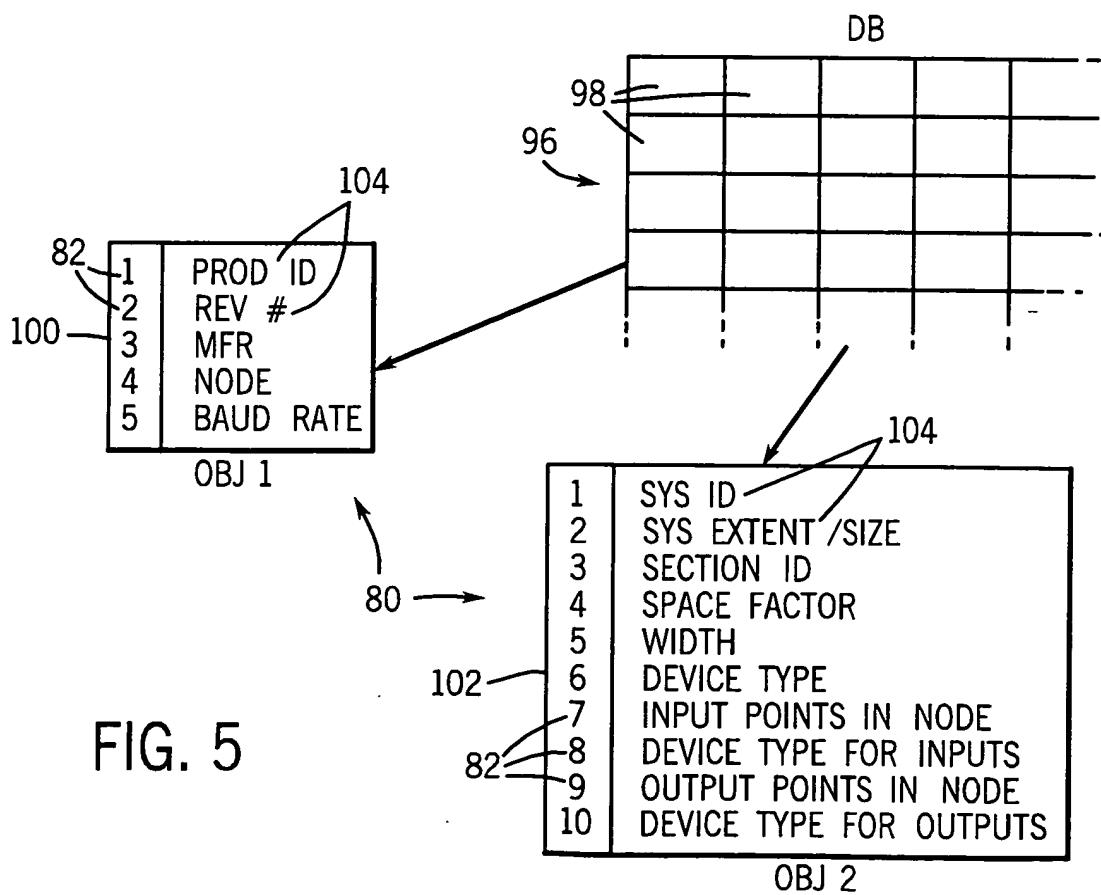


FIG. 5

FIG. 6

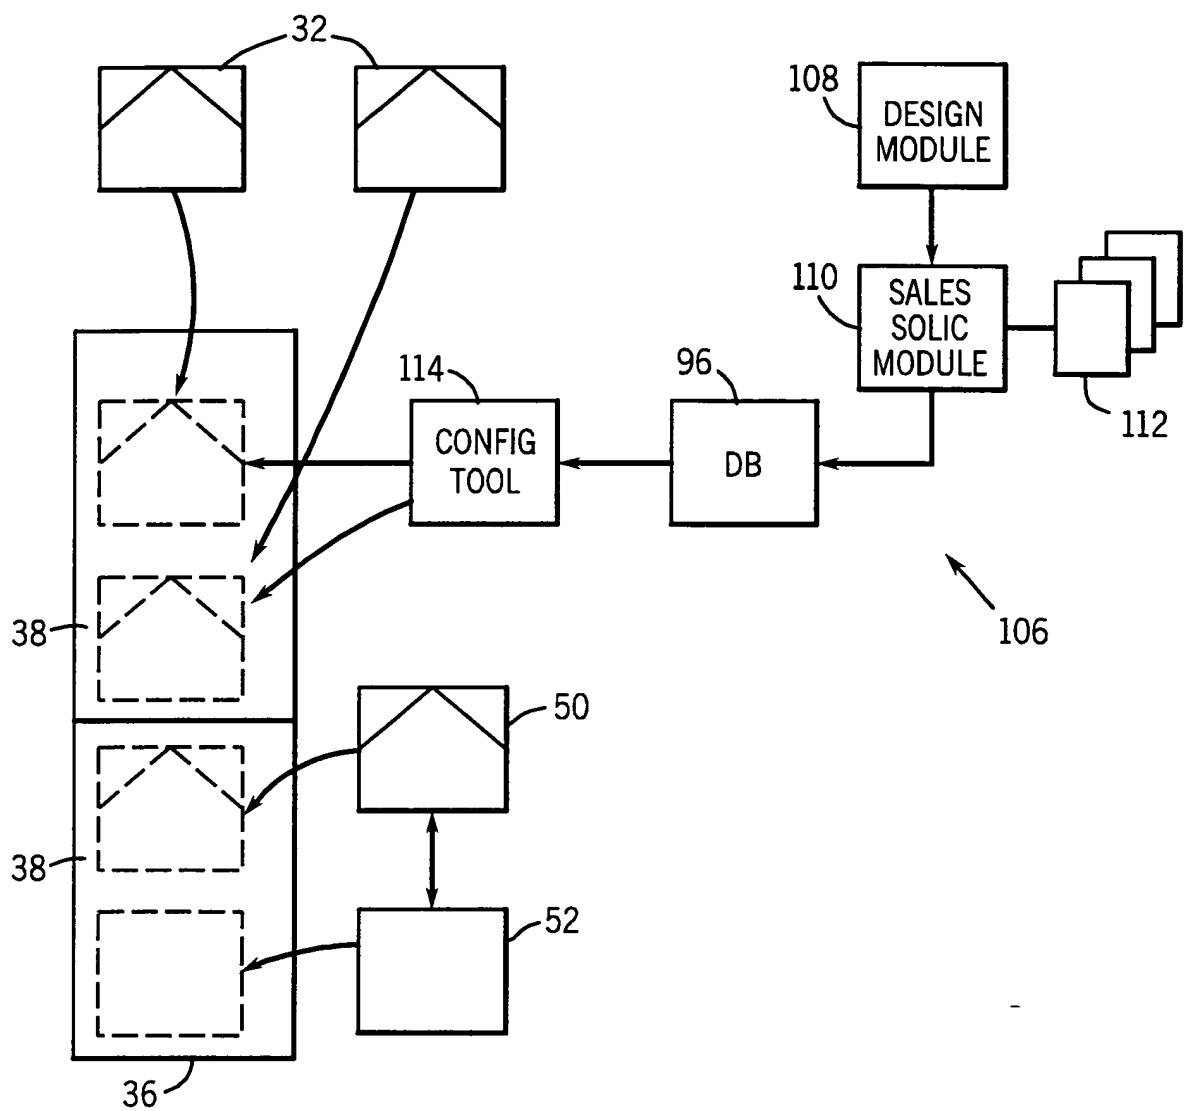


FIG. 7

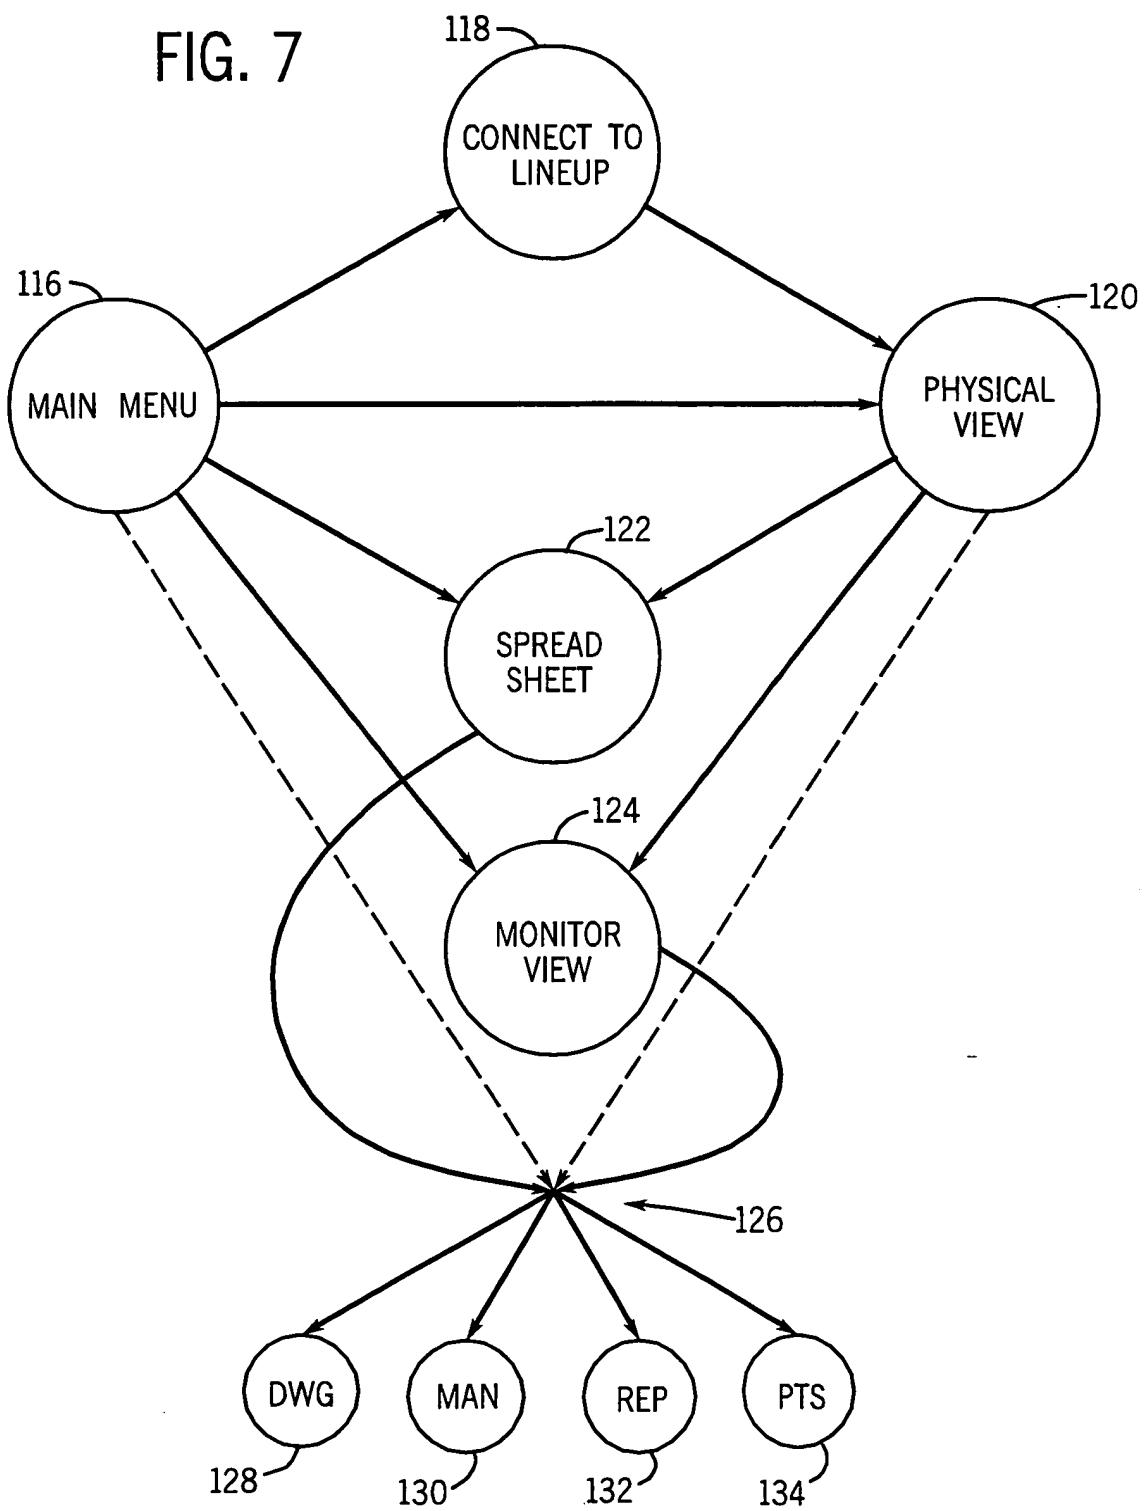


FIG. 8

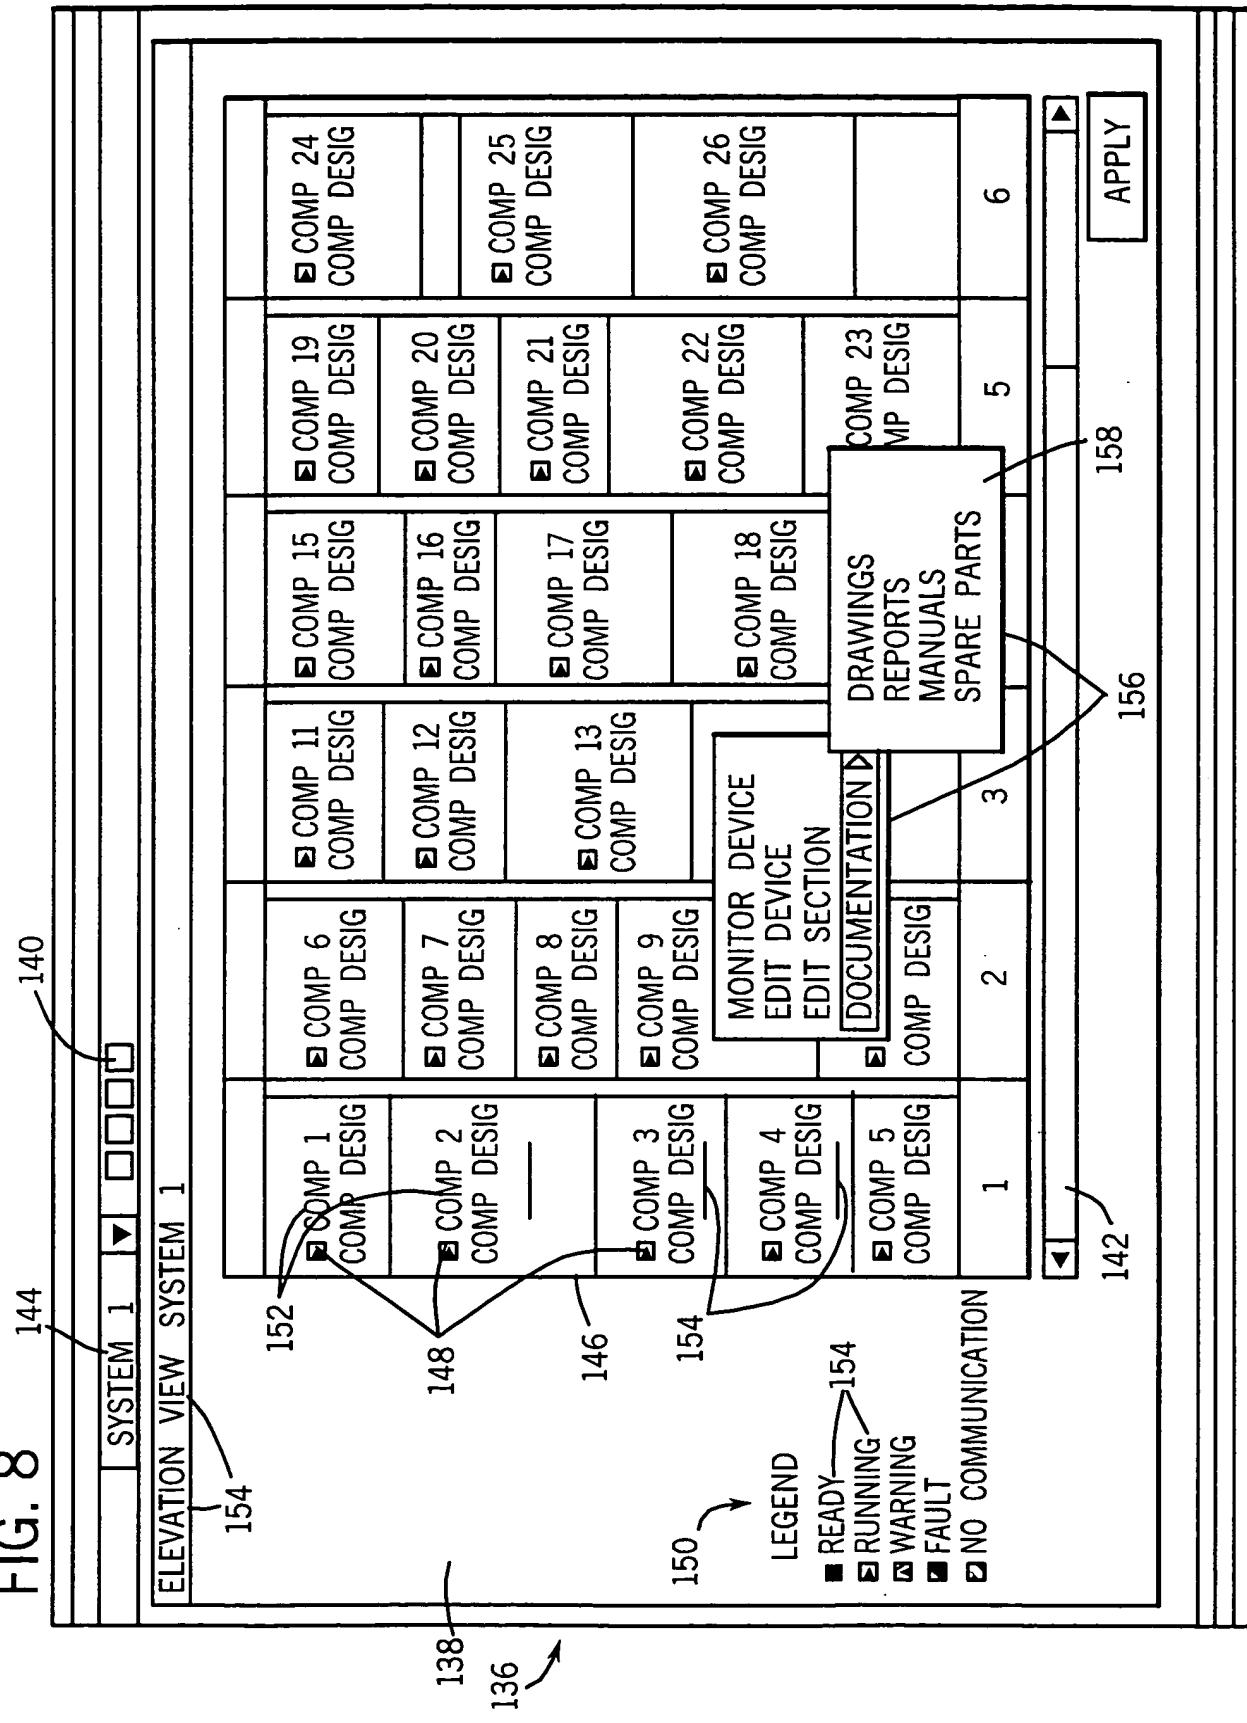


FIG. 9

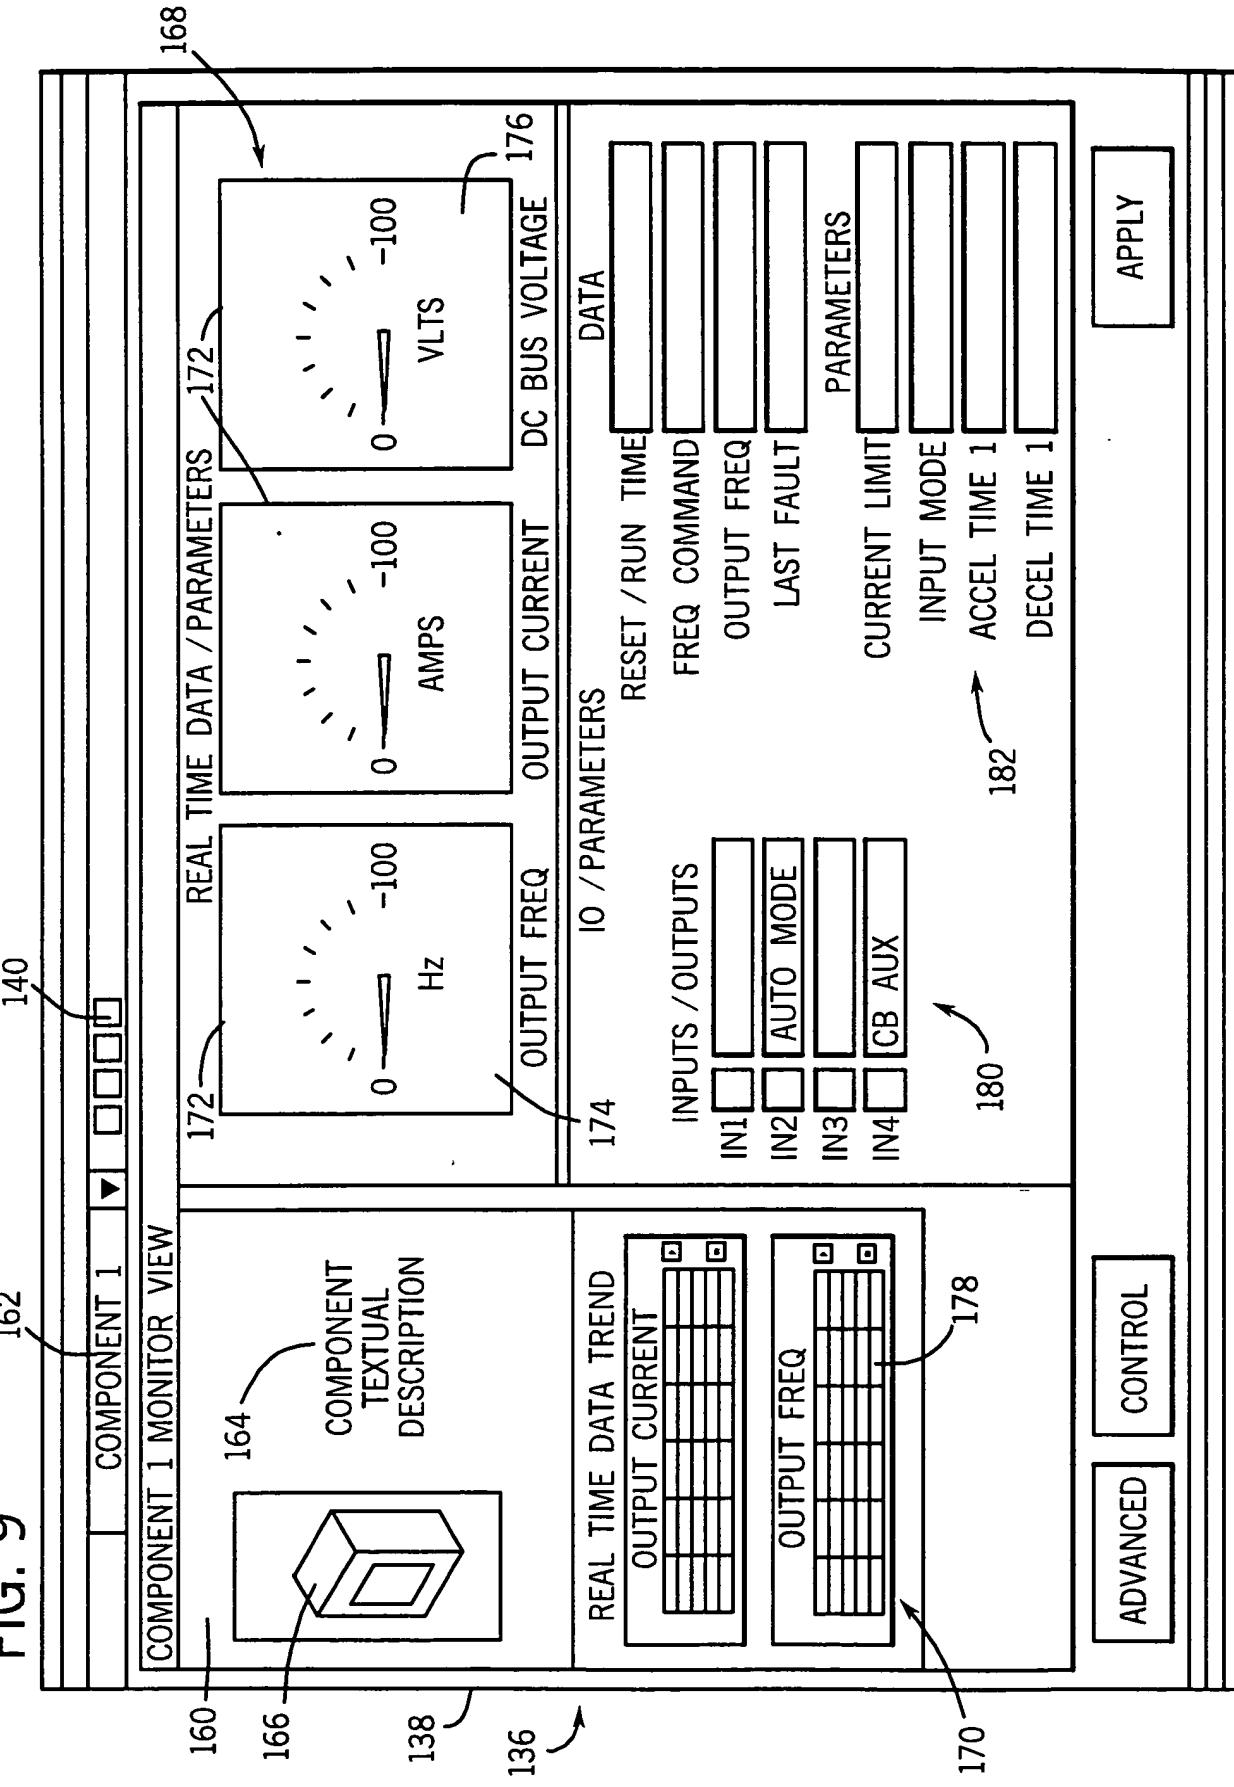


FIG. 10

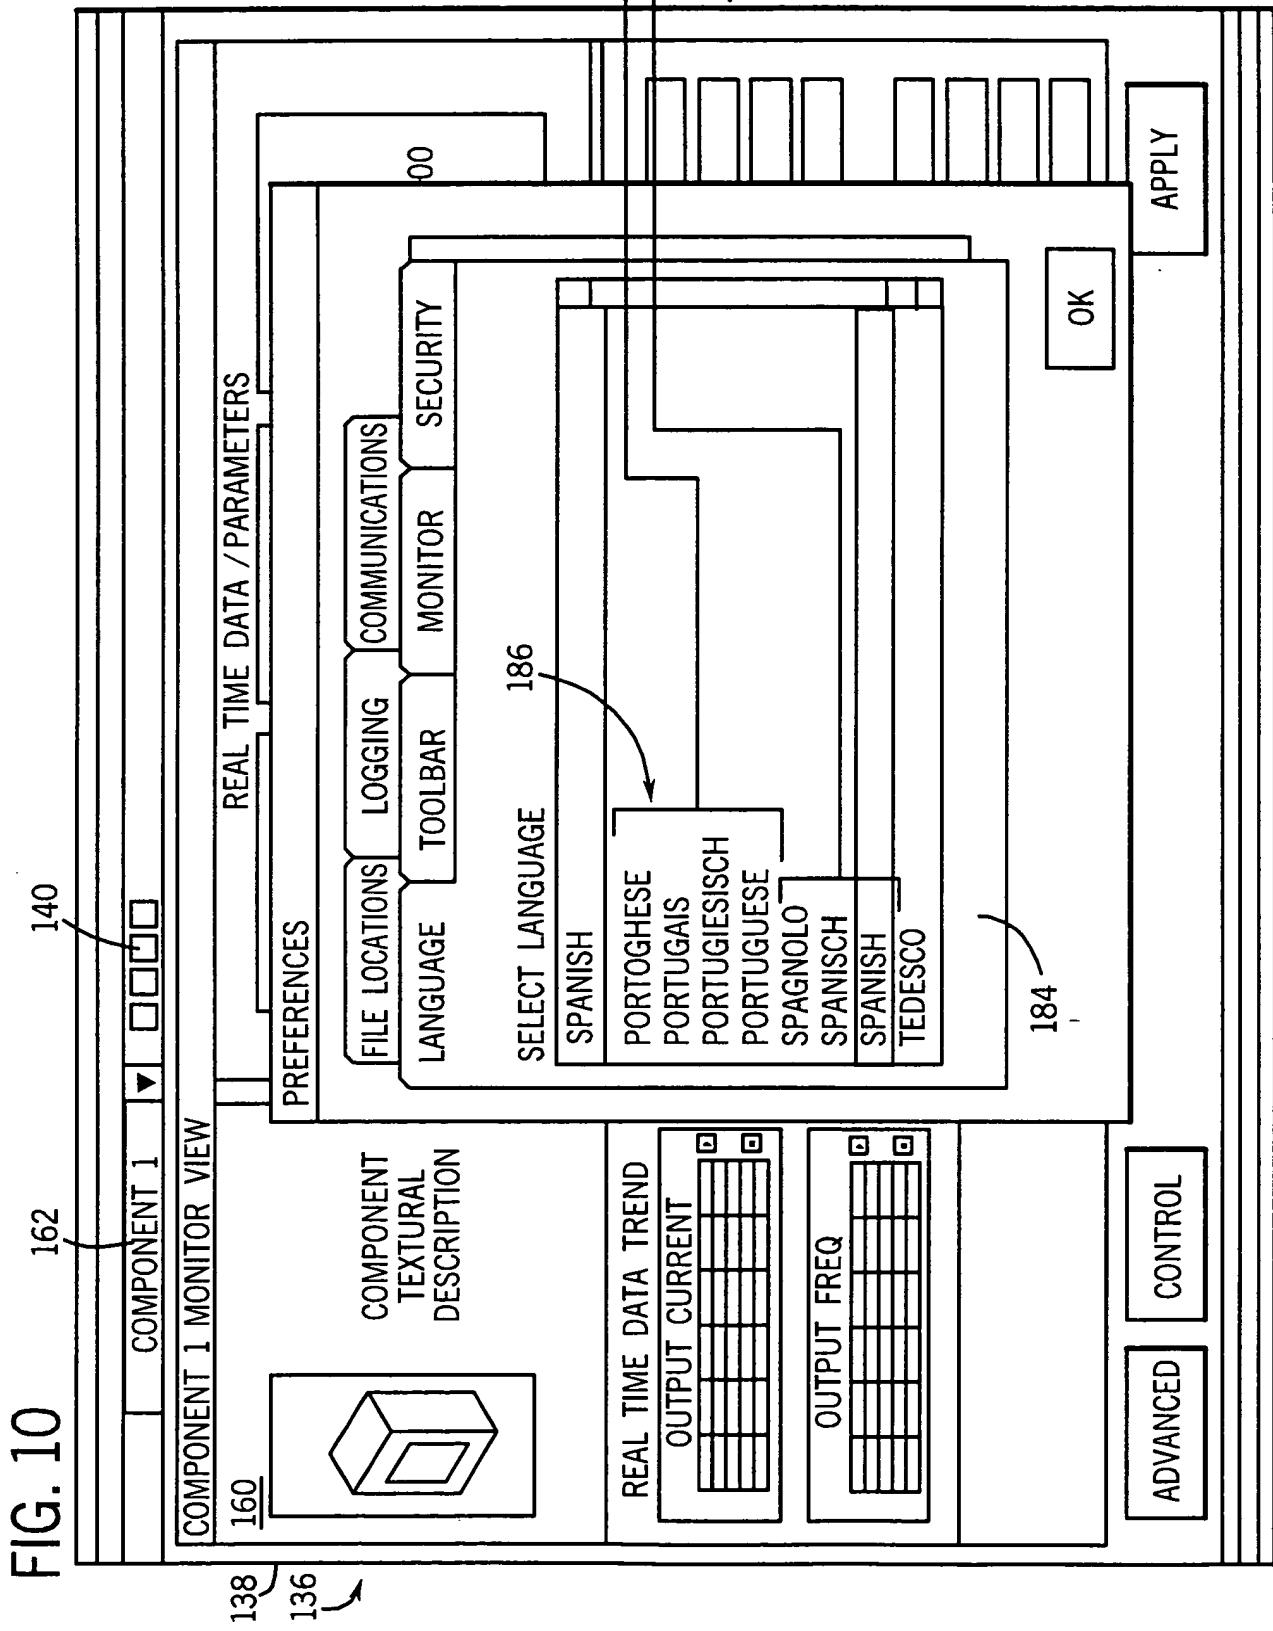


FIG. 11

144

140

The diagram illustrates a software interface for a 'SYSTEM 1 SPREADSHEET VIEW'. At the top left, there are four small square buttons labeled 140. Below them is a 'SYSTEM 1' button with a downward arrow, labeled 144. To its right is a 'SELECT FILTER' button with a downward arrow, labeled 198. Further right are two radio buttons: 'ASCENDING' (selected) and 'DESCENDING', labeled 190. A curved arrow labeled 194 points from the 'SELECT FILTER' button towards the main data grid.

The main data grid contains the following data:

DNETDEVICE	NODE	VERT SECTION	UNIT LOC	SPACE FACTORS	UNIT TYPE	IN...	WIDTH	RATING	CATALOG NUMBER
DSA	07	2	E	1	FVNR		20	10HP	XXXXXX
DSA	06	2	G	1.5	FVR		20	2HP	XXXXXXXX
DSA	05	2	K	1	FVNR		20	15HP	XXXXXXXXXX
NONE		2	M	0.5	DOOR		20		
1336IMPACT	27	3	A	1	ACD		20	40A	
NONE	3	F	1		DOOR		20		
DSA	09	3	H	2	FVNR				
DSA	4	A	1	FVNR					

To the right of the grid is a 'SHOW / HIDE COLUMNS' dialog box, labeled 196. It contains a table with columns for 'COLUMN NAME' and checkboxes for 'DNET DEVICE', 'STATE', 'NODE', 'SERIAL NUMBER', 'VERT SECTION', 'UNIT LOC', 'SPACE FACTORS', 'DUAL UNIT', and 'LEFT / RIGHT'. Arrows point from the 'DNET DEVICE' and 'STATE' checkboxes to the corresponding columns in the grid. In the bottom right corner of the dialog box are 'OK' and 'CANCEL' buttons.

At the bottom left of the interface is a 'SHOW / HIDE COLUMNS...' button, labeled 136. To its right is an 'EDIT I/O...' button, labeled 138. A curved arrow labeled 192 points from the 'SHOW / HIDE COLUMNS...' button towards the 'EDIT I/O...' button.

FIG. 12


144

The screenshot shows a software application window with the following components:

- Top Bar:** Contains the number "158".
- Left Sidebar:** Includes buttons for "EVENT LOG", "SYSTEM 1", "DOCUMENTATION", "DRAWINGS", "SYSTEM 1 SPREADSHEET VIEW", "REPORTS", "MANUALS", and "SPARE PARTS".
- Search Bar:** A text input field with the placeholder "SELECT SORT" and a dropdown menu showing "NONE" and "DESCENDING".
- Table:** A data grid with columns: DEVICE SERIAL..., DATE, SECTION, LOCATION, DESCRIPTION, DEVICE TYPE, USER 1, and USER 2. The table contains several rows of data.
- Bottom Buttons:** Buttons for "SHOW / HIDE COLUMNS..." and "204".
- Annotations:** Handwritten numbers and arrows pointing to specific elements:
 - "200" points to the "SYSTEM 1" button.
 - "138" points to the "SELECT SORT" dropdown.
 - "136" points to the "SHOW / HIDE COLUMNS..." button.
 - "202" points to the "204" button.
 - "206" points to the "SPARE PARTS" button.

FIG. 13

140

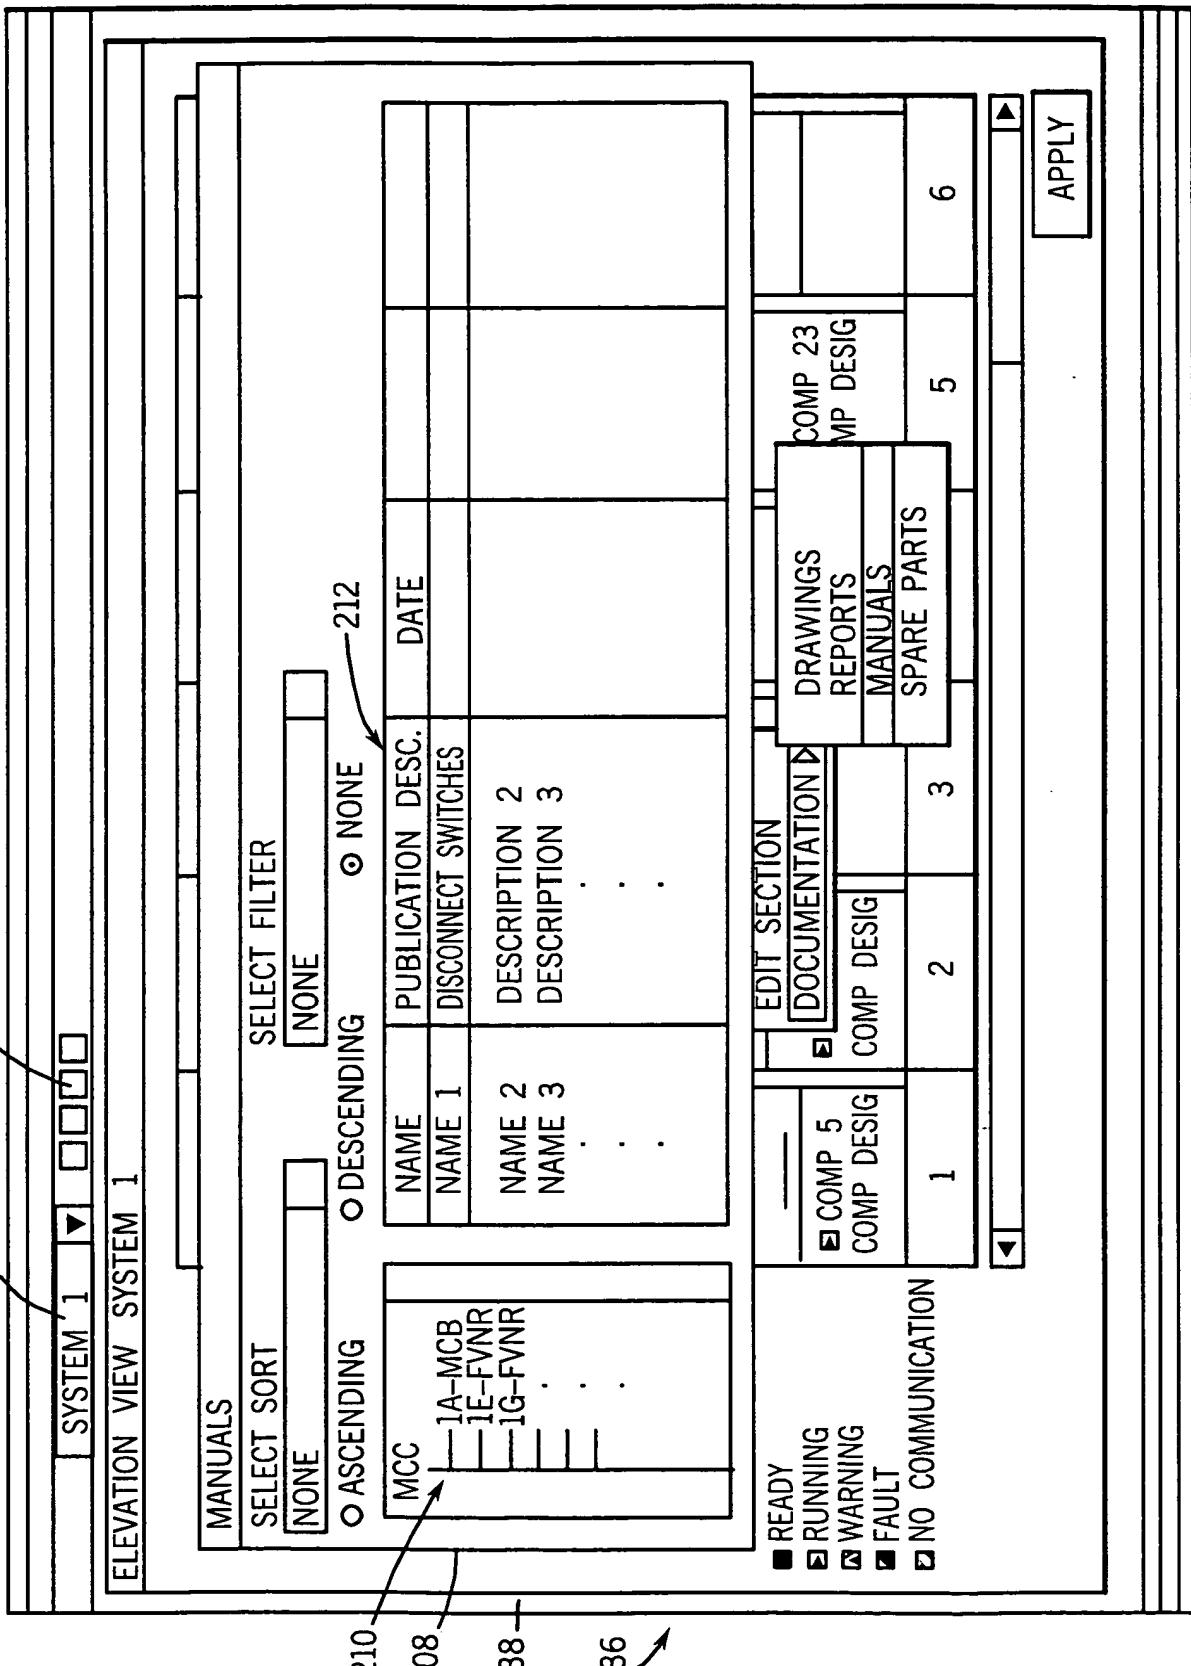

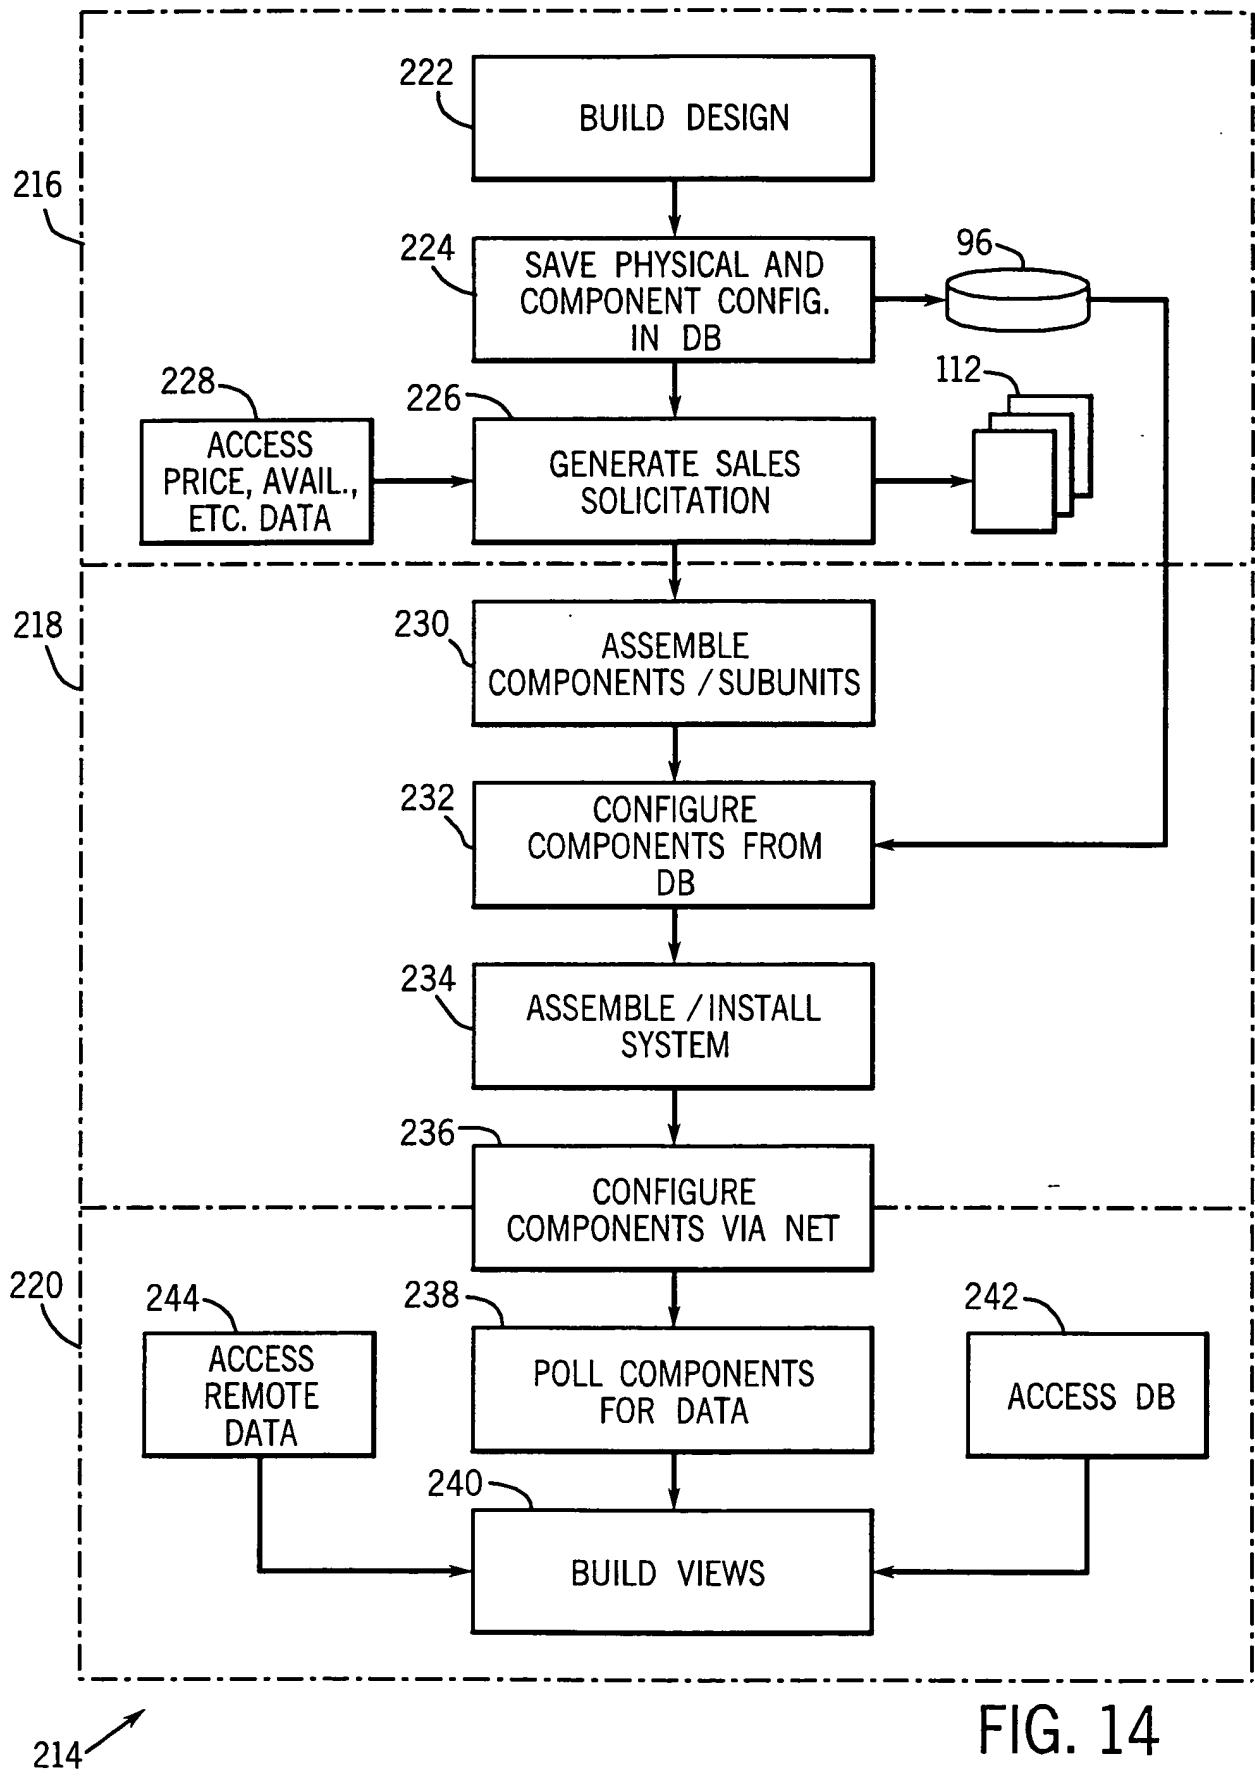


FIG. 14